


703 REMOTE CONTROL (PUSH TO OPEN TYPE)

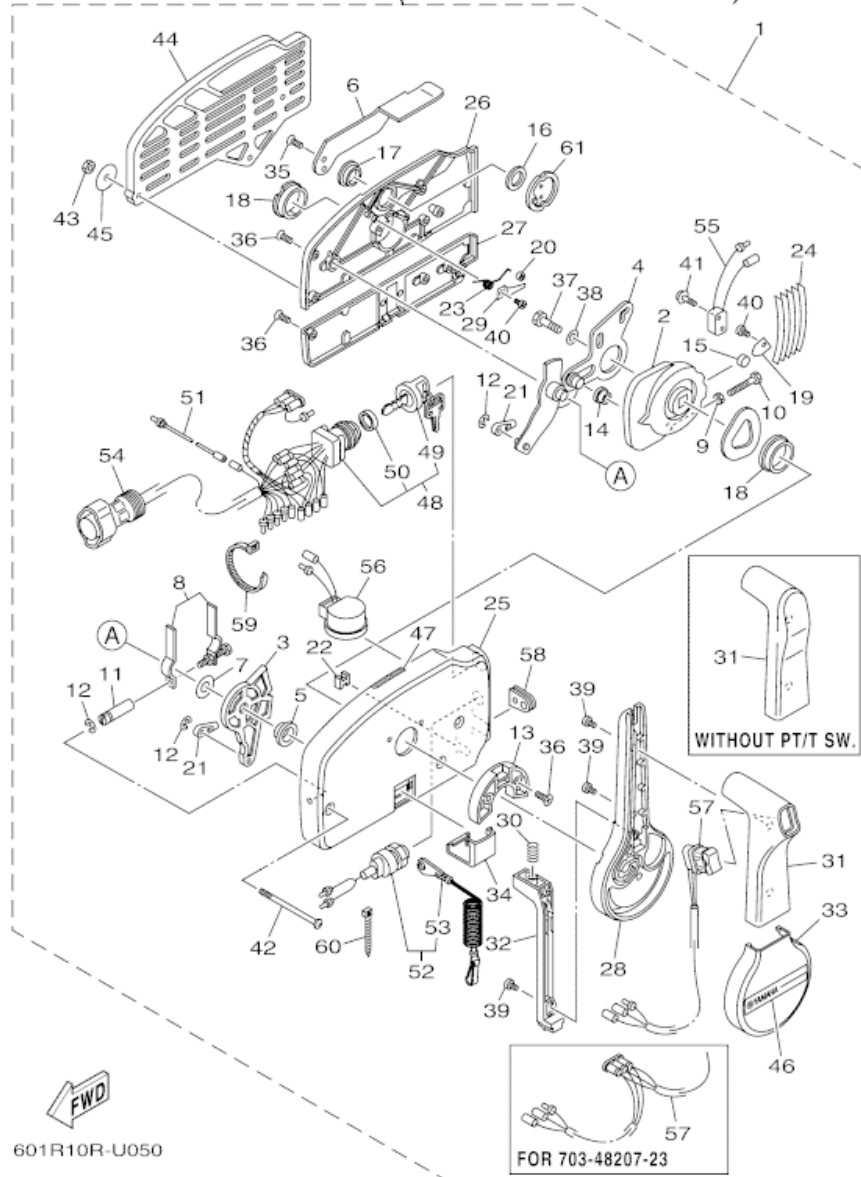

601R10R-U050


*1: FOR 703-48201-22/ 703-48205-23/ 703-48207-23

*2: FOR 703-48201-B2/ 703-48205-B3

Fig. 5 REMOTE CONTROL ASSY 2

Ref. No.	Part No.	Part Name	Remarks
1	703-48201-22	REMOTE CONTROL ASSY (10P)	1 UR WITHOUT PT/T SW.
	703-48201-B2	REMOTE CONTROL ASSY (10P)	1 UR WITHOUT PT/T SW.
	703-48203-22	REMOTE CONTROL ASSY (7P)	1 UR WITHOUT PT/T SW.
	703-48205-23	REMOTE CONTROL ASSY (10P, PTT)	1 UR WITH PT/T SW.
	703-48205-B3	REMOTE CONTROL ASSY (10P, PTT)	1 UR WITH PT/T SW.
	703-48207-23	REMOTE CONTROL ASSY (10P, PTT)	1 UR WITH PT/T SW.
2	703-48232-00	.GEAR	1
3	703-48271-00	.ARM, SHIFT	1
4	703-48261-01	.ARM, THROTTLE	1
5	703-48235-00	.BUSHING	1
6	703-48152-10	.KNOB, FREE ACCEL.	1
7	703-48268-00	.SPACER	1
8	703-48264-00	.FRICTION, THROTTLE	1
9	95380-05600	.NUT	1
10	97380-05025	.BOLT	1
11	703-48265-10	.SHAFT, FRICTION	1
12	93430-06024	.CIRCLIP	3
13	703-48245-00	.PLATE, LOCK	1
14	703-48252-00	.ROLLER, CAM	1
15	701-48248-00	.ROLLER, FREE ACCEL.	1
16	703-48198-00	.WASHER, WAVE	1
17	703-48243-00	.BUSHING	1
18	703-48236-00	.BUSHING 1	2
19	703-48189-00	.RETAINER	1
20	703-48234-00	.ROLLER, DETENT	1
21	703-48345-01	.CABLE END, REMOTE CONTROL 2	2
22	703-48358-01	.ANCHOR, CABLE	1
23	703-48244-00	.SPRING, FREE ACCEL.	1

703 REMOTE CONTROL (PUSH TO OPEN TYPE)

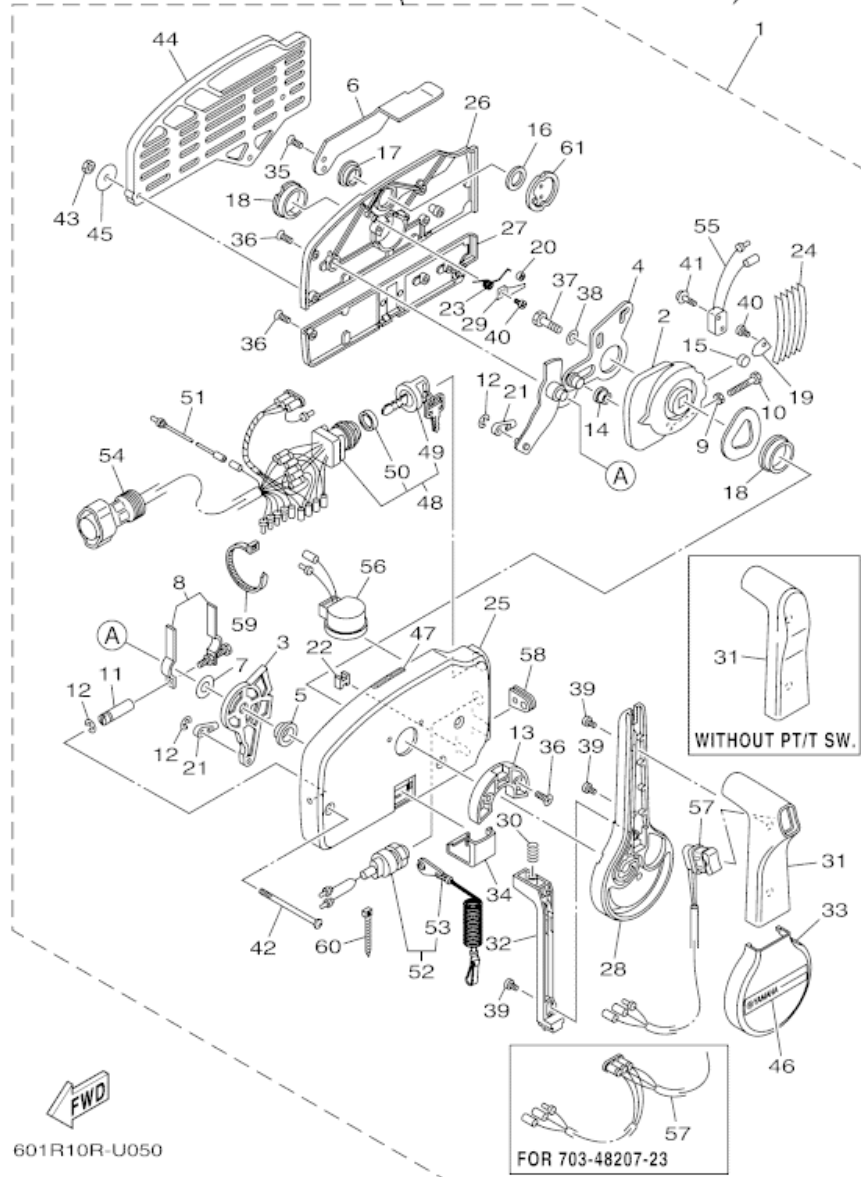


*1: FOR 703-48201-22/ 703-48205-23/ 703-48207-23

*2: FOR 703-48201-B2/ 703-48205-B3

Fig. 5 REMOTE CONTROL ASSY 2

Ref. No.	Part No.	Part Name	Remarks
24	703-48238-00	.SPRING, DETENT	5
25	703-48211-10	.HOUSING,1	1
26	703-48212-10	.BACK PLATE 1	1
27	703-48213-10	.BACK PLATE 2	1
28	703-48221-10	.LEVER, CONTROL	1
29	703-48246-00	.SPACER	1
30	703-48227-00	.SPRING, NEUTRAL LOCK	1
31	703-48222-20	.GRIP, CONTROL LEVER	1 WITH PT/T SW.
	703-48222-30	.GRIP, CONTROL LEVER	1 WITHOUT PT/T SW.
32	703-48223-10	.LOCK, NEUTRAL	1
33	703-48225-10	.COVER	1
34	703-48219-10	.COVER, LEAD	1
35	703-48281-00	.SCREW	2
36	703-44189-20	.SCREW	7
37	97380-08030	.BOLT	1
38	92990-08600	.WASHER, PLATE	1
39	703-48128-10	.SCREW 2	3
40	98580-04006	.SCREW, PAN HEAD	2
41	703-48129-00	.SCREW 3	2
42	703-44189-30	.SCREW	3
43	95380-06600	.NUT, HEXAGON	3
44	703-48293-10	.SPACER, REMOTE CONTROL	1 SINGLE
45	701-48287-00	.WASHER	3
46	703-48215-11	.GRAPHIC	1
47	6X3-44191-00	.INDICATOR, SHIFT	1
48	703-82510-45	.MAIN SWITCH ASSY	1 *1
	703-82510-14	.MAIN SWITCH ASSY	1 *2
	703-82510-34	.MAIN SWITCH ASSY	1 FOR 703-48203-22

703 REMOTE CONTROL (PUSH TO OPEN TYPE)

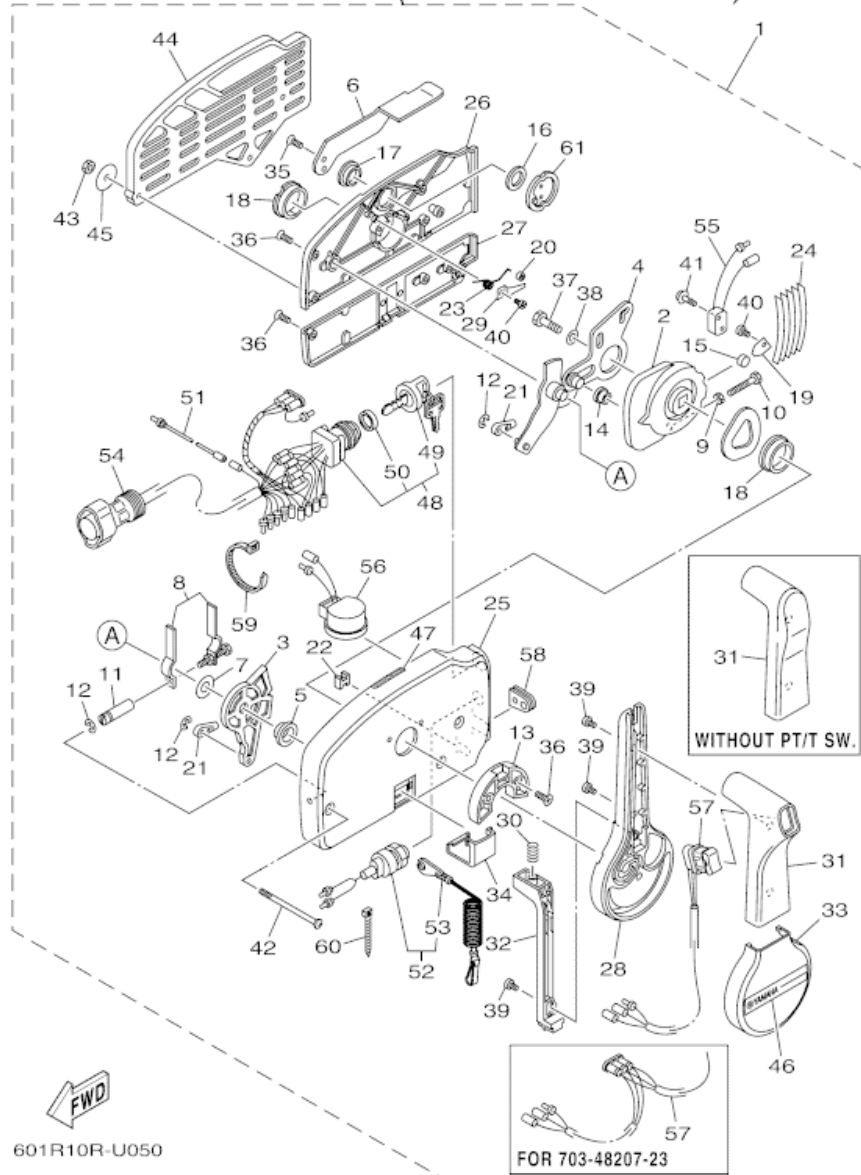

*1: FOR 703-48201-22/ 703-48205-23/ 703-48207-23

*2: FOR 703-48201-B2/ 703-48205-B3

Fig. 5 REMOTE CONTROL ASSY 2

Ref. No.	Part No.	Part Name	Remarks
49	703-82577-00	..CAP, KEY	1 FOR 703-82510-45/34
49	676-82577-01	..CAP, KEY	1 FOR 703-82510-14
50	6K1-82532-00	..CAP	1 FOR 703-82510-45/34
	703-82532-00	..CAP	1 FOR 703-82510-14
51	703-82531-00	..WIRE, LEAD (L70)	1
52	688-82575-02	..ENGINE STOP SWITCH ASSY	1
53	682-82556-00	..LANYARD, STOP SWITCH	1
54	688-8258A-20	..EXTENSION, WIRE HARNESS (4.9M)	1 EXCEPT 703-48203-22 (10P)
	688-82586-21	..EXTENSION, WIRE HARNESS (4.9M)	1 FOR 703-48203-22 (7P)
55	703-82540-00	..NEUTRAL SWITCH ASSY	1
56	703-83383-11	..BUZZER	1
57	703-82563-31	..TRIM & TILT SWITCH ASSY	1 FOR 703-48205-23/B3
	703-82563-21	..TRIM & TILT SWITCH ASSY	1 FOR 703-48207-23
58	703-48284-00	..GROMMET	1 EXCEPT 703-48207-23
	703-48284-10	..GROMMET	1 FOR 703-48207-23
59	703-82591-00	..BAND	1
60	703-82592-00	..BAND	1
61	703-48153-00	..SHAFT, FREE ACCEL.	1